


DISHMACHINE CLEANING & SANITIZING




BASIC WASH PROCEDURE


1 SETUP

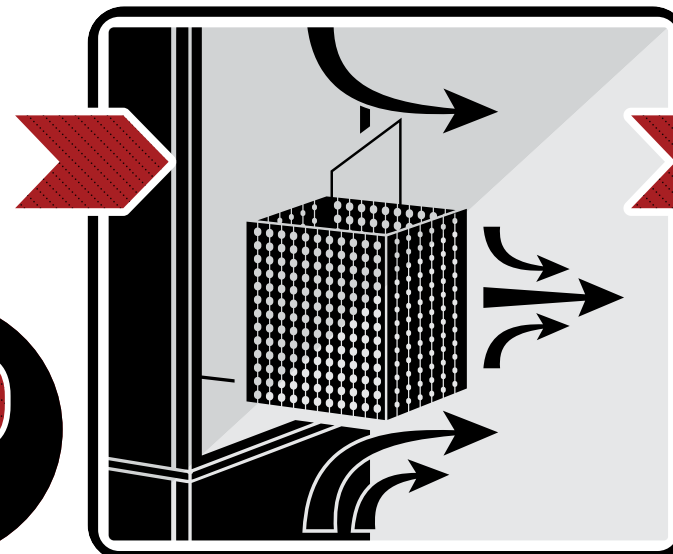


- ✓ CLEAN MACHINE BEFORE USE
- ✓ ENSURE DRAIN STOPPER, STRAINERS & WASH ARMS ARE IN PLACE

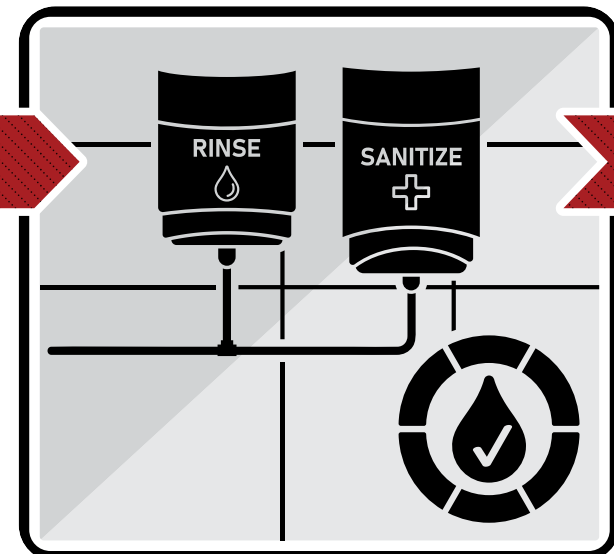


- ✓ REFILL DETERGENT, RINSE AGENT & SANITIZER DISPENSERS

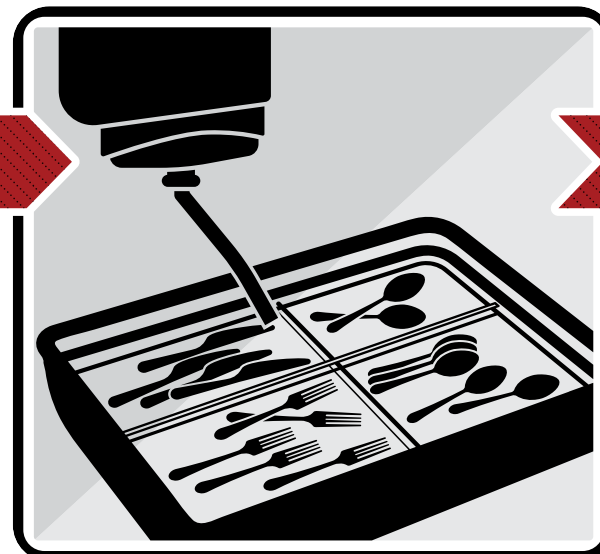

- ✓ CLEAR AREA AROUND DISHMACHINE
- ✓ FILL FLATWARE PRESOAK BIN

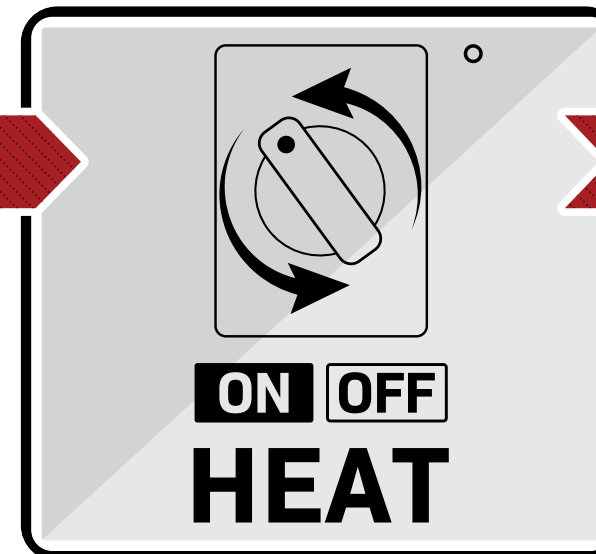

- ✓ CLOSE DRAIN
- ✓ FILL MACHINE WITH WATER
- ✓ TURN ON HEATER

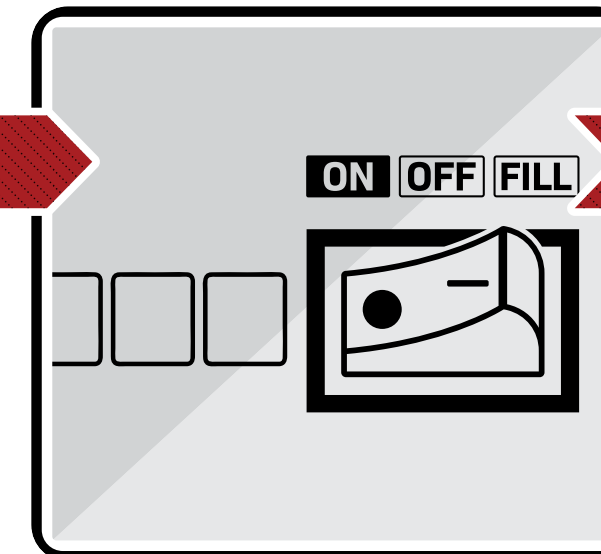


- ✓ PRESS ON/OFF BUTTON TO ACTIVATE MACHINE




- ✓ CHECK FOR MINIMUM WATER TEMPERATURES


2 WASH

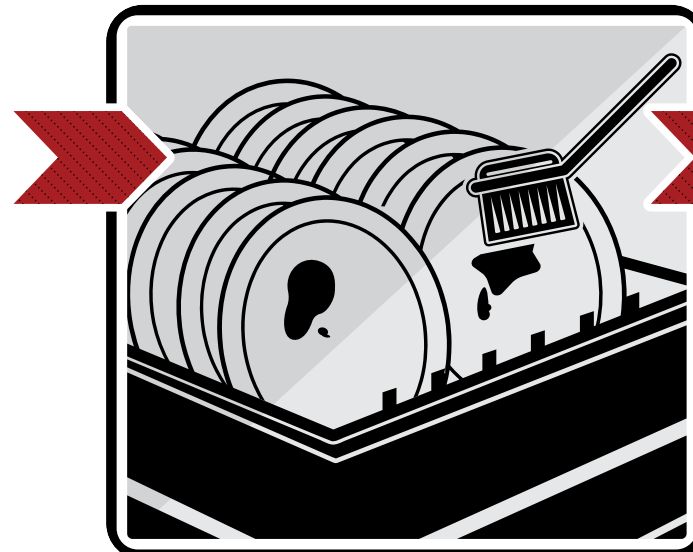


- ✓ RACK & PRE-SCRAPE DISHES

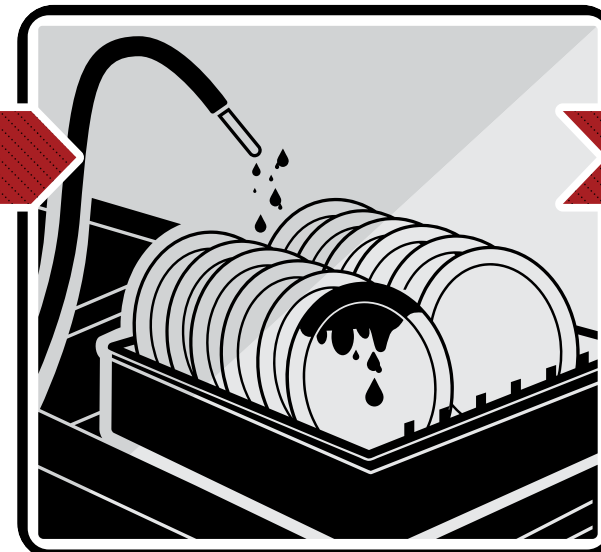


- ✓ PRE-RINSE DISHES

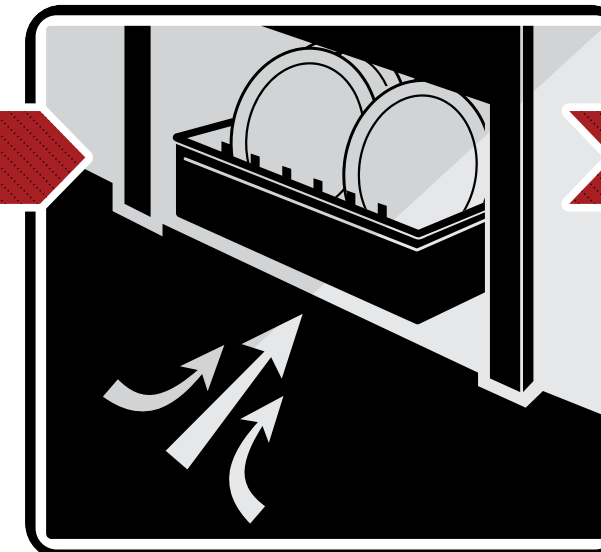

- ✓ OPEN DOOR & INSERT FULL DISH RACK
- ✓ CLOSE DOOR & START WASH CYCLE

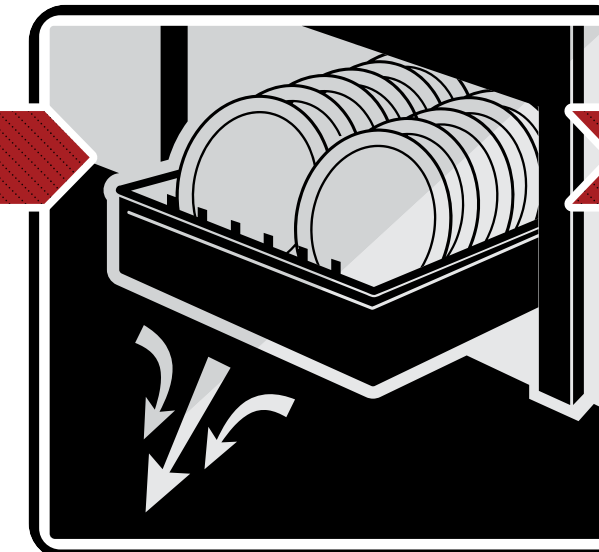


- ✓ REMOVE RACK AT END OF WASH CYCLE
- ✓ LET DISHES AIR DRY

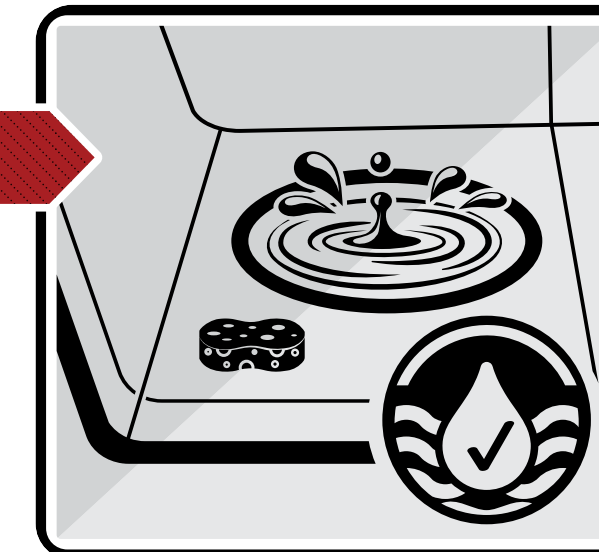


- ✓ REGULARLY REPLACE SOILED WASH TANK WATER


3 CLEANUP

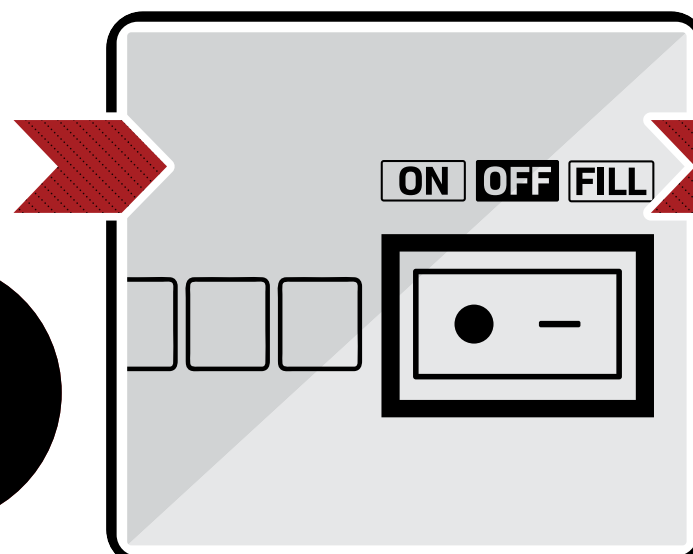


- ✓ TURN OFF MACHINE

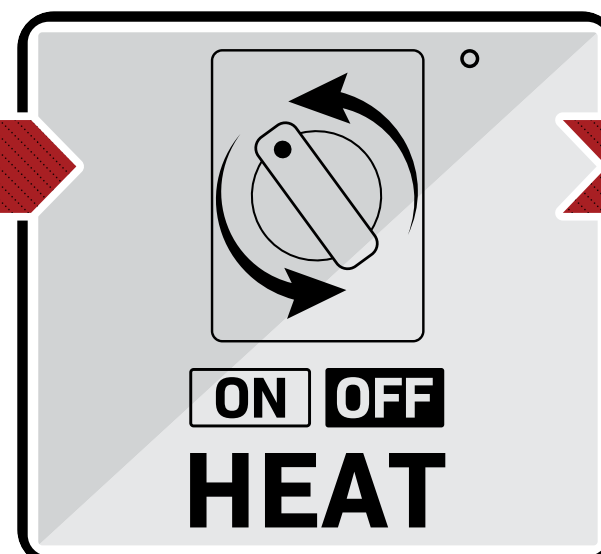


- ✓ TURN HEAT SWITCH TO 'OFF' POSITION
- ✓ DRAIN WATER

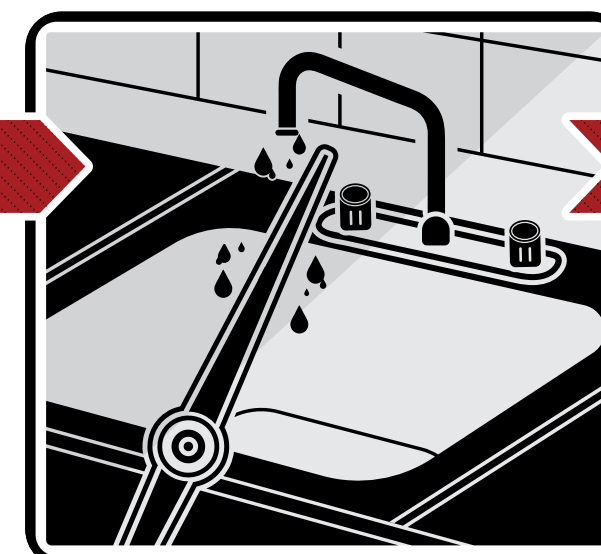

- ✓ REMOVE & CLEAN WASH ARMS & CURTAINS
- ✓ REINSTALL ONCE CLEAN

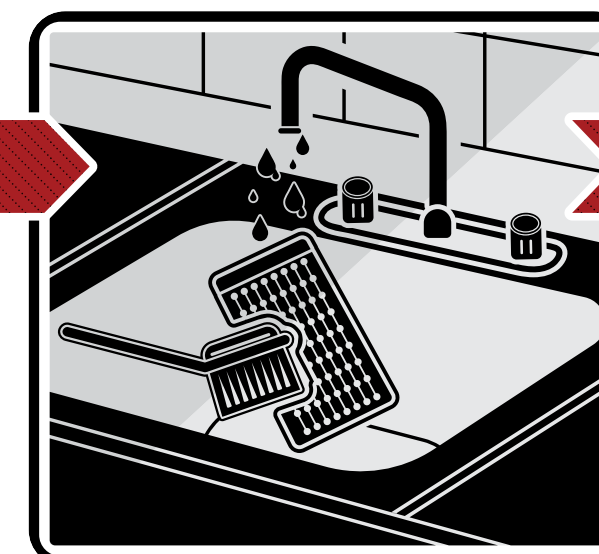

- ✓ REMOVE & CLEAN PUMP INTAKE SCREEN & STRAINERS
- ✓ REINSERT ONCE CLEAN

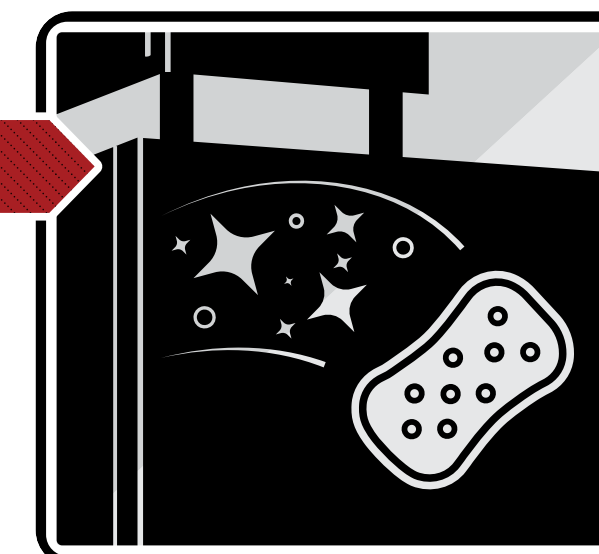

- ✓ CLEAN OUTSIDE OF DISH-MACHINE